

Register your New Fleming Product @  
<http://www.fleming-agri.co.uk/Products/product-registration.asp>

**EU CERTIFICATE OF CONFORMITY**

CONFORMING TO EC Machinery Directive

We

Fleming Agri-Products Ltd  
Newbuildings Industrial Estate  
Newbuildings  
Northern Ireland  
BT47 2SX

Declare in sole responsibility, that the products

Type: STANDARD LANDLEVELLER

To which this certificate applies, conforms to the basic safety  
and health requirements of the Machinery Directive 98/37 EC,  
and the Transposed Harmonised Standard: BS EN 1553 (2000)

Jonathan Lecky  
Production Director



The Fleming logo features a stylized plant icon on the left, composed of three curved lines representing leaves or blades. To the right of the icon, the word 'FLEMING' is written in a bold, blue, sans-serif font. The entire logo is set against a yellow rectangular background.

**Standard Land leveller  
Operators Manual**

**Fleming Agri-Products Ltd  
Newbuildings Industrial Estate  
Newbuildings  
Northern Ireland  
BT47 2SX**

**Tel: (028) 7134 2637**

**Fax: (028) 7134 4735**

**Email: [info@fleming-agri.co.uk](mailto:info@fleming-agri.co.uk)  
[www.fleming-agri.co.uk](http://www.fleming-agri.co.uk)**

*'Quality, Strength & Personal Service'*

This manual is provided to assist you in getting the best results from your machine and ensure that you do so safely. If you have any queries about the use of the machine contact your dealer before use. Please keep this manual for future reference.

## 1.1 FUNDAMENTAL PRECAUTIONS

On delivery, your dealer gave you an explanation of the operation and maintenance of this Fleming Land leveller. Please read and understand these operating instructions before operating the machine for the first time. It is essential that you observe all safety instructions.

Incorrect use or mishandling of the machine can endanger:

- Life and Limb of the operator, other persons or animals standing within the vicinity of the machine.
- The machine and other material assets of the owner or third persons.
- The performance of the machine.

Anyone who is involved in the commissioning, operation or maintenance of the land leveller must read and understand the following instructions very carefully and observe them at all times.

**NEVER DISTRACT ANYONE WHO IS USING A MACHINE.**

## 1.2 AUTHORISED OPERATORS

Youths under the age of 16 may not operate this implement. The owner of the machine must provide the operator with the operating instructions and make sure they have read and understood them. Only then may the leveller be put into operation.

The owner must ensure that only authorised persons operate/work on this machine. He is responsible for any third persons or animals within the working area of the leveller.

**A SAFE DISTANCE OF AT LEAST 5M MUST BE OBSERVED BY ANYONE WITHIN THE VICINITY OF THE LEVELLER.**

## 1.3 GENERAL SAFETY AND ACCIDENT PREVENTION REGULATIONS

- NEVER** attach to a tractor which would be rendered unstable when the implement is operated at its full capacity. Take note of the maximum load permissible on the linkage.
- NEVER** attempt to move this implement manually.
- Before operation make yourself familiar with all elements and controls of the machine as well as their functions.
- Before operation inspect the area around you. Keep children away. All visitors should be kept away from work area.
- Under NO Circumstances** should anyone attempt to use the leveller as means of personal transport. It is designed as a special purpose farm implement and is unsuitable for the safe transportation of passengers. **NEVER** allow anyone especially children to travel anywhere between the tractor and the leveller.
- NEVER** allow children to play on or around tractors and machinery.

## 1.4 GENERAL OPERATING INSTRUCTIONS

- This land leveller is a tractor-mounted farm implement. Attempts should not be made to attach the land leveller to any other type of vehicle.
- Ensure the implement is correctly and securely attached to the operating vehicle using the Standard 3-point linkage with the lift arm pins provided.
- Attaching and detaching of the Leveller to a tractor must be carried by only one operator. There should not be any other persons in the vicinity of the implement or in the tractor.
- Raise or lower the leveller according to the grade of terrain to be levelled and the amount of levelling required.

## 1.5 MAINTENANCE

- As a rule, disengage the driving system, and stop the engine prior to carrying out maintenance, servicing, cleaning or repair work. **ALWAYS** remove the ignition key.
- Prop the land leveller with appropriate supports before carrying out any maintenance.
- The manufacturer will not be responsible for any damages or injuries caused by unauthorised repair, alterations or mishandling of the product.
- If the implement is attached to the tractor the alternator and battery cables should be disconnected before carrying out any welding maintenance.
- Maintain product with care. Check periodically for damage that would affect the safe operation of the implement.
- ALWAYS** ensure all warning stickers are kept clean and in good condition.