

USER MANUAL



THE PURPOSE OF THIS MANUAL IS TO TRAIN THE USER TO A CORRECT USE OF THE AGRICULTURAL IMPLEMENT IN COMPLIANCE OF SAFETY RULES IN ORDER TO PREVENT INJURY AND TO SAFEGUARD THE HEALTH.

NORMATIVE REFERENCE

This manual has been written in compliance of the following law:
Directive 89/392/C and amended UNI EN 292/2 – 1992. DPRN. 547 27/04/55 – work's safety rules.

HOW TO READ AND USE THIS MANUAL

This manual is a part of the machine and of the initial provision.
That means it must be kept for all machine's life, also in case of selling of that one to others.
Further copies of this manual, must be requested through buying order to the manufacturer or its dealer.
It is not allowed to use the machine without a previous careful reading of this manual, only trained operators may use it.

The employer is responsible for the disclosure of this document to all the employees who will work with the machine.

The operator, after following what is written in this manual, must follow the general safety rules as in law prescriptions of destination's country.

It is strictly prohibited to make whatever kind of modifications to the machine or to this technical document.

GENERAL INFORMATIONS

IDENTIFICATION DATA OF THE AGRICULTURAL IMPLEMENT

The manufacturer's identification is made in conformity of the legislation through the following points:

- DECLARATION OF CONFORMITY
- CE MARK
- USER MANUAL

DANGER WARNINGS


The agricultural implement is equipped with pictograms which recall risks.
On Picture 2 is indicated the points where the labels are located.

DELEKS Srl

Via Mandolossa, 136/b - 25064 - Gussago (BS) - ITALY

Phone: +39-030-7050848 - E-mail: info@deleks.com


www.deleks.com

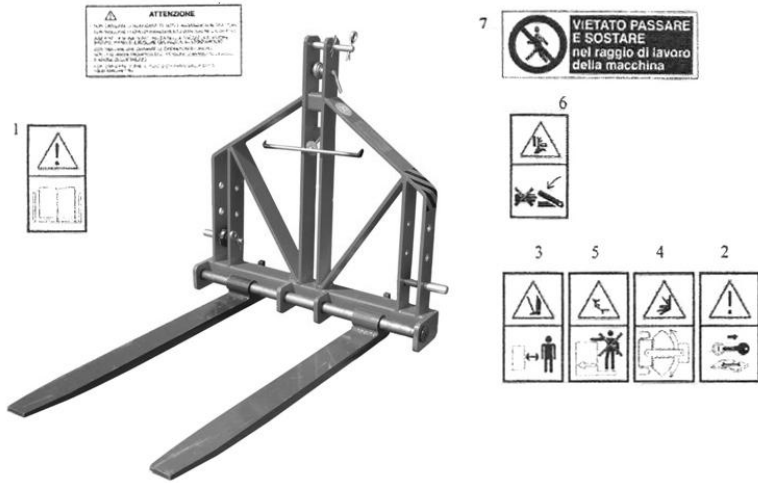

1. Read the manual before use
2. Turn off the tractor before to make maintenance on the machine
3. Keep safety distance from the tool, feet shearing risk
4. Keep safety distance from the working machine, 15 meters
5. Never step over the machine
6. Danger don't put the hands
7. Prohibition sign
8. Warning's label fitting to tractor.

On picture 3 are indicated the machine's sizes

FIG. 3

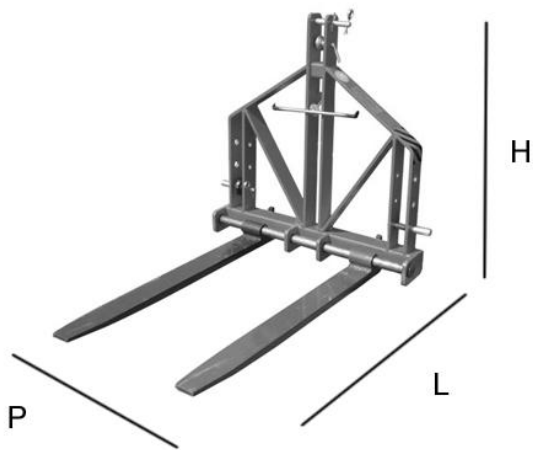

MOD	D300	D700
L	80	100
P	91	94
H	75	96

TRANSPORT OF THE MACHINE

To transport the items, it is necessary to follow the packing requirements.
As in picture 4

FIG. 4



IMPORTANT

To lift the items it is necessary to use pallets appropriate to the weight of the item.
Check that pallets are not broken.
Lift the load gently and in case of sharp edges, protect it with packing material.


MOUNTING TO THE TRACTOR

The machine must be on flat terrain, the machine's feet must safely support it, so that the operator could easily fit the third point linkage.

MAINTENANCE

- A Check each 2 working hours the overturning pin N° 1
- B Before start working with the machine, check the pallet forks.
- C Check the linkage pins.

FIG. 6

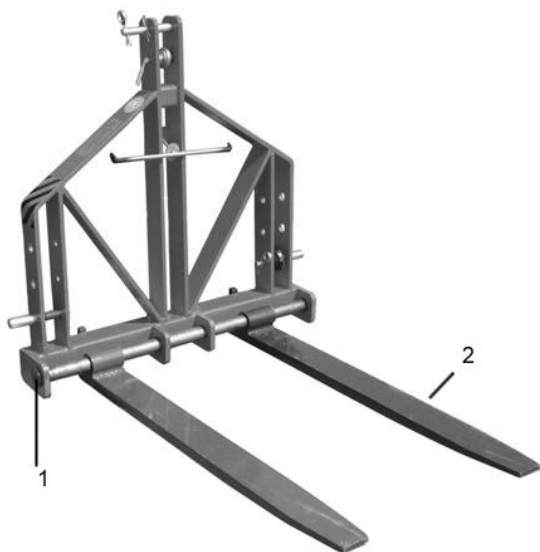

SPARE PARTS ORDERS

To help a prompt and correct supply of spare parts, the order should indicate:

- MODEL OF IMPLEMENT
- QUANTITY FOR EACH PART
- PART'S CODE AS IN TABLE
- DESCRIPTION OF THE PART
- DELIVERY DATE OF THE IMPLEMENTS